

● SUCTION UNITS

LSG-02 DE AND LSG-02 D

The little catchment miracle



LSG-02 DE

Technical Information

Square, practical, good: The easily operated suction drawer LSG-02 is suitable for continuous operation, is technically refined, absolutely reliable and is designed precisely for the work sequences typical in laboratories. The unit, completely manufactured from metal, automatically starts running when the stand-by mode is switched on and as soon as the drawer is pulled out. If a technical appliance is hooked up to the suction unit then this will only start running when the suction drawer is pulled out. At the same time, the technical machine will be turned off when the drawer is closed – hence it is impossible for work to take place without any suction. In addition the LSG-02 DE has a practical, automatic switching-on device for the automatic switching on of the suction via the project engineering motor.

- easily operated, single position suction with high degree of effectiveness
- suitable for continuous operation (switchable)
- automatically switches off at filter saturation point – including all peripheral appliances
- optical display when filter change required
- problem-free installation, simple filter change
- LSG-02 DE: automatic switch-on facility for the automatic switching on of suction via the technical apparatus
- gold and debris drawer optionally available as an interim drawer as well as a high durability, monomer activated carbon filter

● Technical data and accessories

LSG-02 D	Item no.: 145998
LSG-02 DE	Item no.: 145997*
Voltage*	220–240 V / 50/60 Hz
Output	105 W
Power consumption	0.5 A
Power consumption connection unit	max. 2 A
W x H x D/D max.	445 x 190 x 505 mm/ 720 mm
Weight	17.2 kg, 17.5 kg*
Sound level	61 dB(A)
Suction capacity	360 m ³ /h (free-blowing)

Incl. in delivery	Item no.:
Protection sheet	144011
Supply line	592012
Micro fine dust filterbag	---
Accessories	Item no.:
Additional drawer (can also be retrofitted)	145005
Mounting frame for KaVo tables	145006
Universal extractor hood with base plate	145200
Monomer activated carbon filter	145240
Spare micro fine dust filterbag (dust class M) 1 set = 3 pieces	611015
Spare filterbag for plaster (class 1 / class 2) 1 set = 3 pieces	611017

*Other voltages on request


Technical changes reserved



LSG-02 DE with universal extractor hood



LSG-02 DE with additional drawer

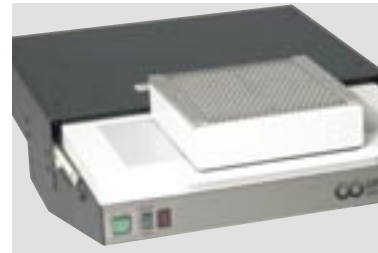

LSG-02 DE with monomer activated carbon filter

Major features at a glance

- easily operated and durable, single position
- LSG-02 DE: automatic switch-on facility for the automatic switching on of suction via the technology machine
- simple to handle, high safety standards via coasting automatics
- practical accessory variations with the possibility of later assembly
- manufactured totally from metal

www.wassermann-dental.com